


# Thermostat - Room Temperature Control

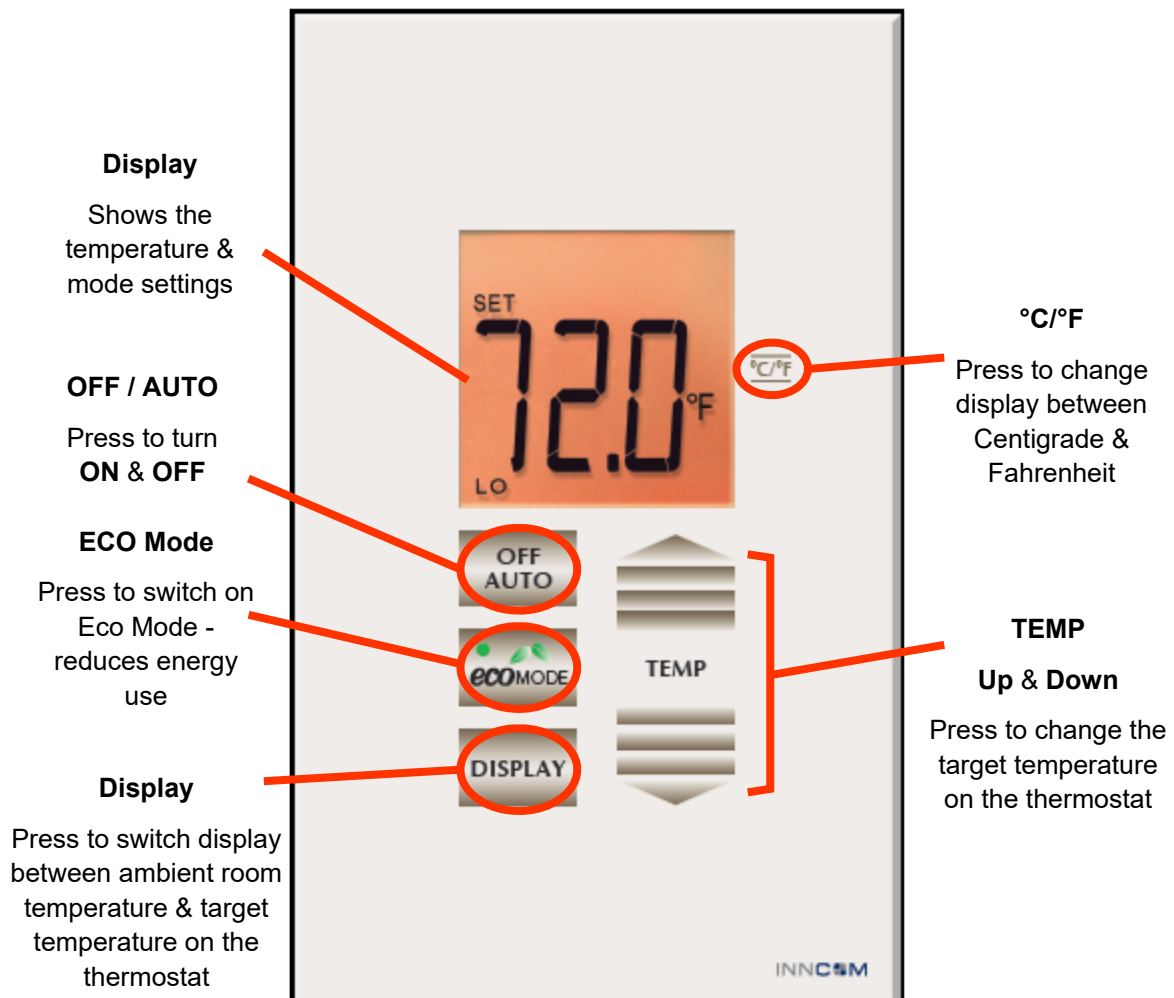

**Standard Temperature (Default Setting) = 22°C (71.6°F)**

1. When you are in the room, as long as the control is in Auto mode, the system will automatically keep the temperature within 2° of the set temperature.
2. If you leave the room with the control in Auto mode, the system will keep the room temperature within 6° of the set temperature.